

5/0 121935

Pic
Mar
Wor
Par
Par
Com
Com
Item
D443
*
Cove
D380
*
Wind
D443
*
Fwd
D443
*
T/R B

Work Order

March-26-15 1:31:32 PM

Item ID: D350-567-141
Revision ID:
Item Name: Floor Window Close Out
Start Date: 3/18/15
Required Date: 3/26/15
Reference:

Approvals: Pr
QC

Sequence ID/
Work Center ID

130
130
Packaging
Packaging

140
140
QC
Quality Control

Work Order ID 130953

March-26-15 1:31:32 PM

130953

Item ID: D350-567-141
Revision ID:
Item Name: Floor Window Close Out
Start Date: 3/18/15 Start Qty: 1.00 *1*
Required Date: 3/26/15 Req'd Qty: 1.00 *1*
Reference:

Accept

N9000040100

Setup Start *NS1*
Stop *NS2*

Cust Item ID:
Customer:

Approvals: Process Plan: MJS Date: 15-03-30 Tooling: Date:
QC: Date: SPC (Y/N): Date:

Run Start *NR1*
Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
100	Document Control	0.00							
DSI 9590	Revision Nbr F								
100	DOCUMENT CONTROL								
DC	Memo	0.00							
Doc.Control -USB or Paperwork	Photocopy bluefile & type labels per PPP D350-567-141 040003								
110	Pick Kit	0.00							
110	Memo	0.00							
Packaging									
120	QC4- 100% Inspect kits for completeness	0.00							
120	Memo	0.00							
QC									
Quality Control									

MJS 15-06-25
DAS 02 JUN 30 2015
chooy
see attached
DAS 26 9-89 JUN 25 2015
DAS 27 9-89
DAS 02 9-89 JUN 30 2015

DQA: _____

DQA: _____ DQA: _____ Date: _____



QA Closed: _____

QA Cl

QA Closed: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE

Work Order update only ☐

Work Order: _____
Part No. _____
NCR No. _____

World

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION		AGAINST DEPARTMENT/PROCESS							
	Rework	☐	Skid-tube	☐	Crosstube	☐	Water Jet	☐	Engineering	☐
	Scrap	☐	Machining	☐	Small Fab	☐	Prod. Eng. Coord.	☐	Quality	☐
	Use-as-is	☐	Thermoforming	☐	Finishing	☐	Rec/Store/Packaging	☐	Other	☐
	Suspected Unapproved	☐	Large Fab	☐	Composite	☐	Supplier	☐		

Root Cause	Date
Design	
Doc/Data	
Equip/Tooling	
Handling/Pre	
Material	
Operator	
Offset/Setup	
Process	
Supplier	
Training	
Transport	
Unapproved	

Root Cause	Date
Design	
Doc/Data	
Equip/Tooling	
Handling/Pre	
Material	
Operator	
Offset/Setup	
Process	
Supplier	
Training	
Transport	
Unapproved	

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

Landing Gear

☐	Bending
☐	Centre Not Concentric
☐	Cracks
☐	Crimp/Kink/Ripple/Wave
☐	Cuffs
☐	Crushing
☐	Heat Treat
☐	Inspection Strip in Tube
☐	Marks/Chatter
☐	Turning Sequence
☐	Wave/Twist in Tube

Landing Gear		General		FAULT CATEGORY	
☐	Bending	☐	Bend	☐	Folio/Program
☐	Centre Not Concentric	☐	BOM/Route	☐	Grain
☐	Cracks	☐	Broken/Damage/Defect	☐	Hardware
☐	Crimp/Kink/Ripple/Wave	☐	Burrs	☐	Inspection Incomplete/Unqualified
☐	Cuffs	☐	Contamination	☐	Instructions Incomplete/Unclear
☐	Crushing	☐	Countersink	☐	Misaligned/off center
☐	Heat Treat	☐	Cut Too Short	☐	Mislabeled
☐	Inspection Strip in Tube	☐	Drawing	☐	Misread
☐	Marks/Chatter	☐	Drill Holes	☐	Off-set
☐	Turning Sequence	☐	Finish	☐	Out of Calibration
☐	Wave/Twist in Tube	☐	Fit/Function	☐	Out of Sequence
☐		☐		☐	Outside Dimensions
☐		☐		☐	Over/Under tolerance
☐		☐		☐	Part Incorrect
☐		☐		☐	Part Lost/Missing
☐		☐		☐	Part Moved
☐		☐		☐	Positioned Wrong
☐		☐		☐	Power Loss/Surge
☐		☐		☐	Pressure/Forced Set-up
☐		☐		☐	Temperature/Cure
☐		☐		☐	Weld
☐		☐		☐	Wrong Stock Pulled
☐		☐		☐	Other

Picklist Print

March-26-15 1:31:30 PM

Page 2

Work Order ID: 130953

130953

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 3/18/15

Required Date: 3/26/15

Start Qty: 1.00

Required Qty: 1.00

D4435-9 Manufactured No

110 Each 4.0000 2 2

D4435-9

Bracket
DAS
02
9-89

**

DAS
26
9-89

DAS
27
9-89

Location	Loc Qty	Loc Code
ST107	4	

130228

4

D4436-041 Manufactured No

110 Each 3.0000 1 1

D4436-041

Aft Bracket Assembly

DAS
02
9-89

**

DAS
26
9-89

DAS
27
9-89

Location	Loc Qty	Loc Code
ST623	3	

127849

3

D4441-1 Manufactured No

110 f 604.3750 2 2

D4441-1 240

Rubber Seal

DAS
02
9-89

**

DAS
26
9-89

DAS
27
9-89

Location	Loc Qty	Loc Code
ST407	379.875	

120932

379.875

ST422

224.5

120932

224.5

AN3-3A Purchased No

110 Each 540.0000 7 7

AN3-3A

Bolt
DAS
02
9-89

**

DAS
26
9-89

DAS
27
9-89

Location	Loc Qty	Loc Code
ST338a	450	

m131305

150

m131624

300

ST350

90

m129591

90

JUN 25 2015

March-26-15 1:31:31 PM

Shop Packet Print

Page 2

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Crosstube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐
--	--	---

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

March-26-15 1:31:31 PM

Page 3

Work Order ID: 130953

130953

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 3/18/15

Required Date: 3/26/15

Start Qty: 1.00

Required Qty: 1.00

AN525-10R6

Purchased

No

110

Each

104.0000

2

2

AN525-10R6

Screw

DAS

02

9-89

**

68-6 DAS
92 27
9-89

Location

Loc Qty

Loc Code

ST329

104

M130325

4

M131420

100

2x

AN525-832R7

Purchased

No

110

Each

41.0000

2

2

AN525-832R7

Screw

DAS

02

9-89

**

68-6 DAS
92 27
9-89

Location

Loc Qty

Loc Code

GA

41

m129909

41

2x

MS21042L06

Purchased

No

110

Each

361.0000

7

7

MS21042L06

Nut

DAS

02

9-89

**

68-6 DAS
92 27
9-89

Location

Loc Qty

Loc Code

ST260a

300

m131317

300

7x

ST304

50

m131294

50

ST305

11

m129499

9

m130325

2

JUN 25 2015

March-26-15 1:31:31 PM

Shop Packet Print

Page 3

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Crosstube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐
--	--	---

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

March-26-15 1:31:31 PM

Page 4

Work Order ID: 130953

130953

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 3/18/15

Required Date: 3/26/15

Start Qty: 1.00

Required Qty: 1.00

MS21042L08

Purchased

No

110

Each

1,818.000

2

2

MS21042L08

Nut

**DAS
02
9-89**

Location

Loc Qty

Loc Code

CA

101

m129682

101

ST260a

1000

m131697

1000

ST304

717

123900

16

m128401

102

m130325

15

m131317

410

m131624

174

**DAS
26
9-89**

**DAS
27
9-89**

2x

MS21042L3

Purchased

No

110

Each

2,223.000

5

5

MS21042L3

Nut

**DAS
02
9-89**

Location

Loc Qty

Loc Code

FP001

420

M130922

420

GA

830

M131317

830

ST305

973

116549

12

126333

230

M128754

2

M131624

729

**DAS
26
9-89**

**DAS
27
9-89**

5x m132382

JUN 25 2015

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width:100%; border: none;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design ☐									
Doc/Data ☐									
Equip/Tooling ☐									
Handling/Pre ☐									
Material ☐									
Operator ☐									
Offset/Setup ☐									
Process ☐									
Supplier ☐									
Training ☐									
Transport ☐									
Unapproved ☐									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

March-26-15 1:31:31 PM

Page 5

Work Order ID: 130953

Parent Item: D350-567-141

Parent Item Name: Floor Window Close Out

130953

D350-567-141

Start Date: 3/18/15

Start Qty: 1.00

Required Date: 3/26/15

Required Qty: 1.00

MS21059L3

Purchased

No

110

Each

205.0000

2

2

MS21059L3

Nut Plate

**DAS
02
9-89**

Location

Loc Qty

Loc Code

CA

16

M129682

16

GA

11

113749

3

M130823

8

ST303

178

M131616

178

MS35206-229

Purchased

No

110

Each

34.0000

7

7

MS35206-229

Screw

**DAS
02
9-89**

Location

Loc Qty

Loc Code

ST277

34

M131078

34

NAS1149F0332P

Purchased

No

110

Each

4,194.000

12

12

NAS1149F0332P

Washer

**DAS
02
9-89**

Location

Loc Qty

Loc Code

GA

222

122063

222

ST260a

2586

m128401

6

m131026

80

m131697

2500

st268

1386

123900

460

m130325

840

m130388

86

JUN 2 5 2015

March-26-15 1:31:31 PM

Shop Packet Print

Page 5

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Crosstube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐
--	--	---

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

March-26-15 1:31:31 PM

Page 6

Work Order ID: 130953

130953

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 3/18/15

Required Date: 3/26/15

Start Qty: 1.00

Required Qty: 1.00

NAS1149FN616P

Purchased

No

110

Each

58.0000

14

14

NAS1149FN616P

WASHER

DAS

02

9-89

Location

Loc Qty

Loc Code

st268

58

M131026

58

NAS1149FN816P

Purchased

No

110

Each

804.0000

2

2

NAS1149FN816P

WASHER

DAS

02

9-89

Location

Loc Qty

Loc Code

st268

804

117316

804

68-6
92 27
SVD 9-89

68-6
92 DAS
SVD 27
9-89

JUN 2 5 2015

14x

2x

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Crosstube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐
--	--	---

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-567 REV. E OR EARLIER
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-567 REV. 2 OR EARLIER
REF CANADIAN STC: SH92-18
FAA STC: SH989NE
FAA STC: SH990NE

1.0 Purpose

The purpose of this service instruction is to add the D350-567-141/-143/-145 Close-out Kits, which are intended for customers wishing to operate their aircraft with the interior floor window removed. The D350-567-141/-143/-145 Floor Window Close-out Kits provide a barrier around the interior and exterior vertical reference floor window to prevent objects from falling into the aircraft controls when the interior floor window is removed as shown in Figure 1. The -143 Kit is identical to the -141 Kit with the exception of the D4971-041 T/R Bellcrank Cover Assy which replaces the D4435-045 T/R Bellcrank Cover Assy on aircraft fitted with energy attenuating seats. The -145 Kit is similar to the -143 Kit but is only kit compatible with the AS350 B3e aircraft.

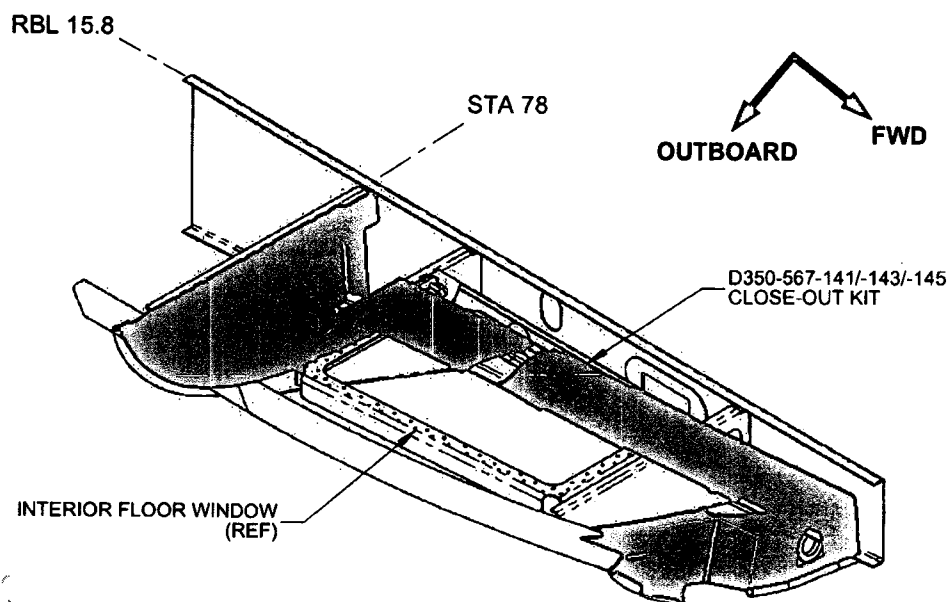


Figure 1. Floor Window Close-out Kit Installation

F	ADDED D4434-047 TO -141 KIT SEE PAR14-372.	AJS	15.01.12
E	ADD -143/-145 KITS	RF	14.03.20
E	CLARIFY FIGURES 3-12	VS	13.09.11
C	CORRECT TYPO NAS1149FN816P WAS NAS1149FN882P	RF	12.03.13
B	MS35206-229 WAS AN525-632R6; NAS1149FN816P (Qty 14) WAS (Qty 9); MS21042L06 (Qty 7) WAS (Qty 9); ADD AN525-832R7, NAS1149FN882P & MS21042L08	RF	12.02.22
A	NEW ISSUE	RF	12.01.09
REV.	DESCRIPTION	BY	DATE
DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	NA	DSI 9590	SHEET 1 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

2.0 Parts List

Qty -141	Qty -143	Qty -145	Part Number	Description
X			D350-567-141	FLOOR WINDOW CLOSE-OUT KIT (REGULAR SEATS)
	X		D350-567-143	FLOOR WINDOW CLOSE-OUT KIT (ENERGY ATTENUATING SEATS)
		X	D350-567-145	FLOOR WINDOW CLOSE-OUT KIT (AS 350 B3e)
1	1	1	D3802-1-024	SEAL (24")
1	1		D4434-041	FWD BRACKET ASSEMBLY
1	1		D4434-047	COVER ASSEMBLY
1			D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	2	2	D4435-9	BRACKET
1	1	1	D4436-041	AFT BRACKET ASSEMBLY
1	1	1	D4441-1-240	RUBBER SEAL (24")
		1	D4730-020-030	VELCRO STRIP
	1	1	D4971-041	T/R BELLCRANK COVER ASSEMBLY
		1	D5076-041	FWD BRACKET ASSEMBLY
7	5	5	AN3-3A	BOLT
2	2	2	AN525-10R6	SCREW
2	2	2	AN525-832R7	SCREW
		1	CB 200	3.5g ACRYLIC ADHESIVE
7	7	7	MS21042L06	NUT (OR MS21042-06)
2	2	2	MS21042L08	NUT (OR MS21042-08)
5	5	5	MS21042L3	NUT (OR MS21042-3)
2	2	2	MS21059L3	NUTPLATE
7	7	7	MS35206-229	SCREW
12	10	10	NAS1149F0332P	WASHER (AN960-10L)
14	14	14	NAS1149FN616P	WASHER (OR AN960-6L)
2	2	2	NAS1149FN816P	WASHER (OR AN960-8L)

3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141/-143/-145 Kits.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D350-567-141/-143/-145	3.9 lb	17.9 in	69.8 in-lb	65.5 in	255.5 in-lb
Floor Window Close-out Kit	1.77 kg	0.45 m	0.80 m-kG	1.66 m	2.94 m-kG

4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141/-143/-145 Close-out Kits. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
 D350-567-115 - OK to remove D3295-041
 D350-567-031 - OK to remove D3212-1
 D350-567-011 - OK to remove D2214
 D350-567-021 - OK to remove D2951
- It is acceptable to drill/trim the D350-567-141/-143/-145 Close-out Kits as required to improve fit.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

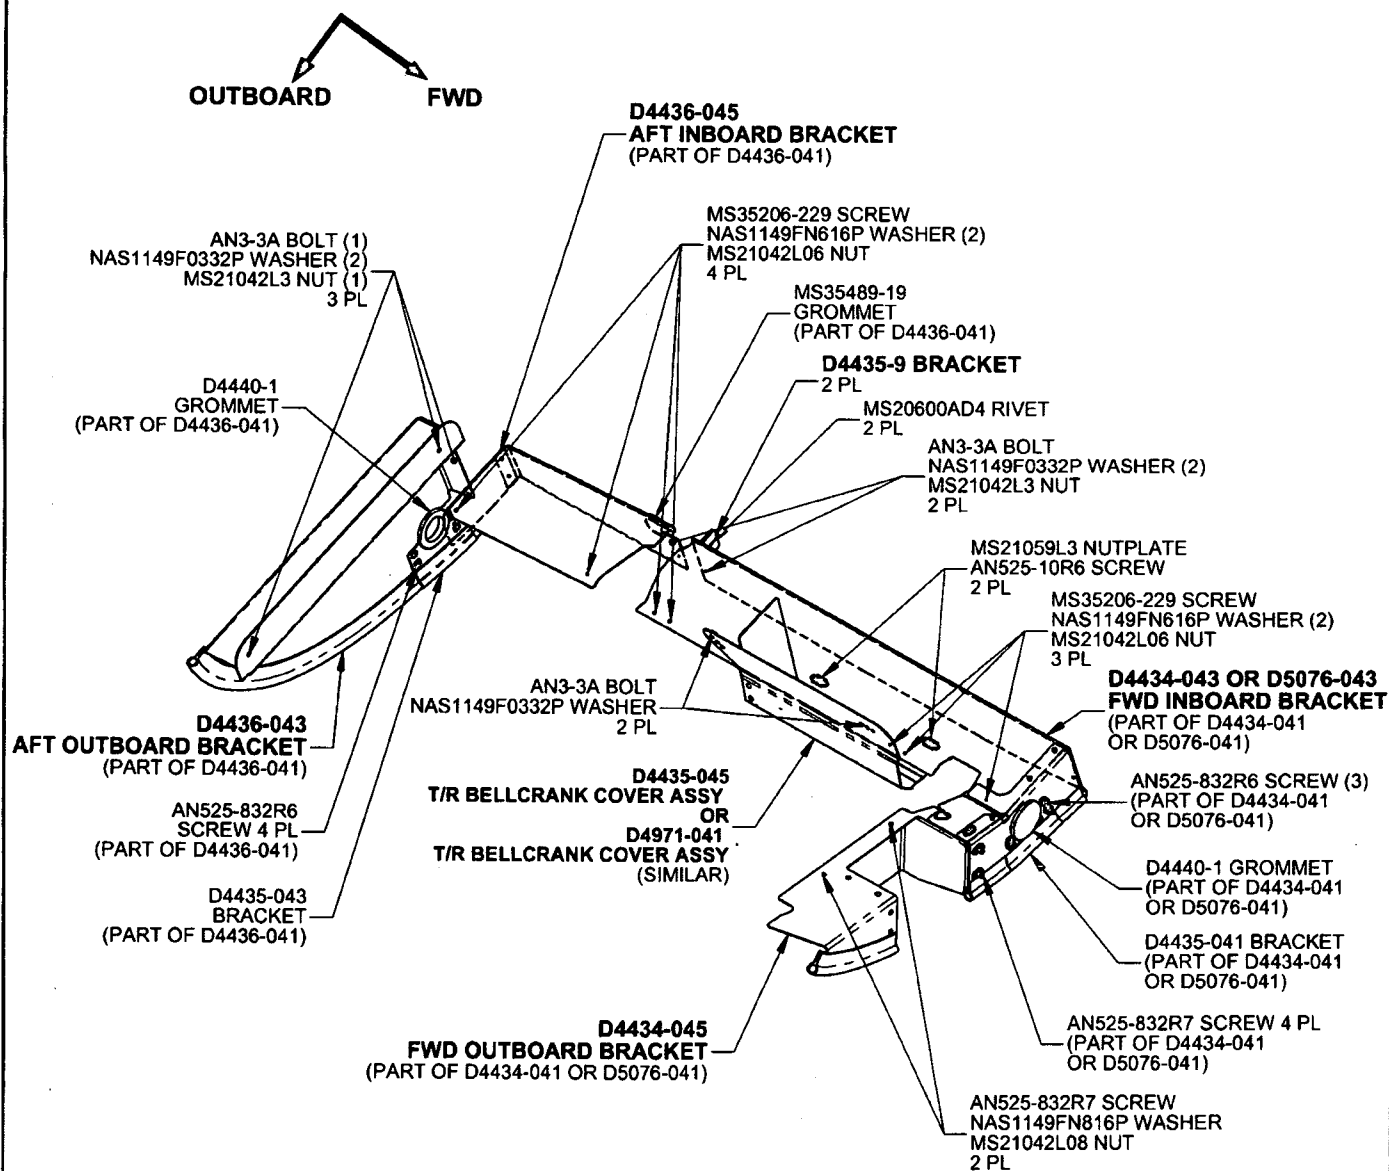


Figure 2. Floor Window Close-out Kit Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *D. Shepherd*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 3 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

4.1 Temporarily install D4436-043 Aft Outboard Bracket and D4436-045 Aft Inboard Bracket using clecos and/or cleco clamps. Before drilling holes:

- a) Position the D4436-043 Aft Outboard Bracket so the flange contacts the main beam as shown in Figure 3.
- b) Confirm that the D4436-043 Aft Outboard Bracket and beam angle are parallel as shown in Figure 4.

4.2 Temporarily install D4434-043/D5076-043 Fwd Inboard Bracket and D4434-045 Fwd Outboard Bracket using clecos and cleco clamps. Confirm there is no contact between D4436-045 Aft Inboard Bracket and D4434-043/D5076-043 Fwd Inboard Bracket and main beam gusset as shown in Figure 5.

F 4.3 For -141 installations, if aircraft is equipped with Collective Circuit Breaker Board box, trim D4434-043 Fwd Inboard Bracket as shown in Figure 14. Note: Confirm the D4434-047 Bracket fits over the Collective Circuit Breaker Board box. Adjust opening as required.

4.4 For -143 installations, if aircraft is equipped with Collective Circuit Breaker Board box, trim D4434-043 Fwd Inboard Bracket as shown in Figure 14. Install D4971-041 T/R Bellcrank cover as shown in Figure 13b. Note: Confirm the D4434-047 Bracket fits over the Collective Circuit Breaker Board box. Adjust opening as required.

4.5 For -145 installations, if aircraft is equipped with Collective Circuit Breaker Board box, use D5076-043 Fwd Inboard Bracket as shown in Figure 13c. Install D4971-041 T/R Bellcrank cover as shown in Figure 13c. Note: Confirm the D5076-3 Cover fits over the Collective Circuit Breaker Board box. Adjust opening as required.

4.6 Drill out rivets holding plastic wire bundle stand offs. Transfer drill $\varnothing 0.144$ holes to D4436-045 Aft Inboard Bracket per Figure 6. Transfer drill 2 x $\varnothing 0.144$ holes to D4434-043/D5076-043 Fwd Inboard Bracket per Figure 7. Transfer drill 2 x $\varnothing 0.144$ holes for D4434-043/D5076-043 Fwd Inboard Bracket per Figure 8. Before drilling confirm the D4434-043/D5076-043 and D4436-045 brackets are flush with outboard edge of main beam flange. Assemble D4436-045 Aft Inboard Bracket and D4434-043/D5076-043 Fwd Inboard Bracket and wire bundle stand offs to main beam flange using MS35206-229 screw, NAS1149FN616P washer and MS21042L06 nut.

4.7 Install D4436-043 Aft Outboard Bracket using AN3-3A bolt and NAS1149F0332P washer and MS21042L3 nut per Figure 9.

4.8 Remove 2 rivets holding RH heating plastic stand off as shown in Figure 10. Position the D4435-9 Brackets on the in/outboard sides of the cross beam and transfer drill 2 x $\varnothing 0.129$ holes from crossbeam to both D4435-9 Brackets. Install D4435-9 Brackets and RH heating plastic stand off using MS20600AD4 rivets or equivalent.

4.9 Drill a pilot hole from D4435-9 Bracket to the D4434-043/D5076-043 Fwd Inboard Bracket and D4436-045 Aft Inboard Bracket and open to $\varnothing 0.191$. Install AN3-3A bolt, NAS1149F0332P washer and MS21042L3 nut as shown in Figure 10. Be sure to maintain edge distance.

4.10 Transfer drill 2 x $\varnothing 0.144$ holes from crossbeam to D4434-045 Fwd Outboard Bracket if holes exist in crossbeam. If holes do not exist, drill 2 x $\varnothing 0.144$ holes at either end of D4434-045 bracket as shown in Figure 11. Install AN525-832R7 screws, NAS1149FN816P washer and MS21042L08 nuts.


4.11 FOR D350-567-141 KIT

a) Align D4435-045 T/R Bellcrank Cover Assy with existing holes in RH seat track lower frame and temporarily install using clecos and/or cleco clamps as shown in Figure 12a.

b) Transfer drill 2 x $\varnothing 0.098$ holes from D4435-045 T/R Bellcrank Cover Assy to D4434-043 Fwd Inboard Bracket. Open holes to $\varnothing 0.191$ and install MS21059L3 nut plate into D4434-043 Fwd Inboard Bracket as shown in Figure 12a and Figure 13a. Install D4435-045 T/R Bellcrank Cover Assy using AN525-10R6 screw, AN3-3A bolt and NAS1149F0332P washer per Figure 12a and Figure 13a.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6


DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 4 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

4.12 FOR D350-567-143/-145 KIT

- a) Remove the D4972-041 Side Plate Assy from the D4971-041 T/R Bellcrank Cover Assy and retain fasteners.
 - b) Align D4971-1 T/R Bellcrank Cover with existing holes in RH seat track lower frame and temporarily install using clecos and/or cleco clamps as shown in Figure 12b.
 - c) Bond D4730-020-030 Velcro to back of D4971-1 T/R Bellcrank Cover as shown in Figure 12b using CB 200 adhesive.
 - d) Transfer drill 2 x $\varnothing 0.098$ holes from D4971-1 Cover Plate to D4434-043/D5076-043 Fwd Inboard Bracket. Open holes to $\varnothing 0.191$ and install MS21059L3 nut plate into D4434-043/D5076-043 Fwd Inboard Bracket as shown in Figure 13b/13c. Install D4971-1 Cover Plate using AN525-10R6 screws and D4730-020-030 Velcro per Figure 12b and Figure 13b/13c.
 - e) Re-install the D4972-041 Side Plate Assy using the retained fasteners.
- 4.13 The D4440-1 grommets are provided to facilitate the routing of wiring harness thru the close-out kit as required. The wiring harness should be secure to the aircraft structure per AC 43.13.13-1B or AS350 Chapter 20.02.01.
- 4.14 Use the D3802-1-024 Seal to fill gaps between the brackets and the cowlings that are larger than 0.25 inch.
- 4.15 Perform travel/interference check of the flight controls to ensure there is no interference and all controls still have full travel.
- 4.16 Ensure there is a gap between the components of the D350-567-141/-143/-145 Close-out Kit and the aircraft structure so that the Close-out Kit does not chafe, interfere, or cause damage to the surrounding aircraft structure. In areas where the D350-567-141 /-143/-145 Close-out Kit may contact the aircraft structure, protect from abrasion using chafing tape or a layer Proseal 890 or MIL-S-8802 class B2 sealant or equivalent as required.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 5 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

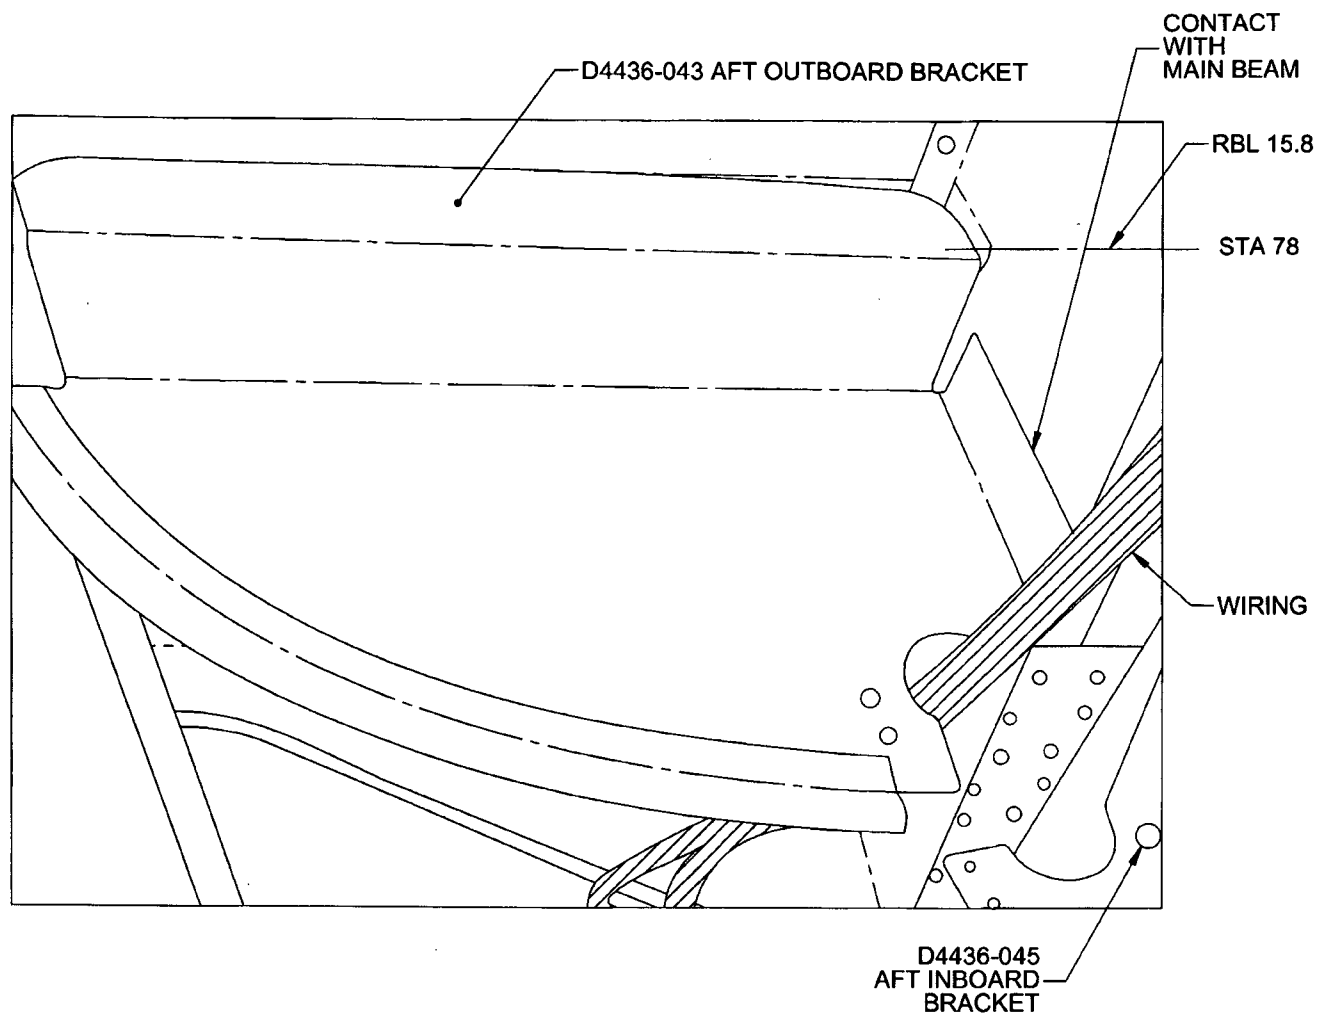


Figure 3. D4436-043 Aft Outboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 6 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

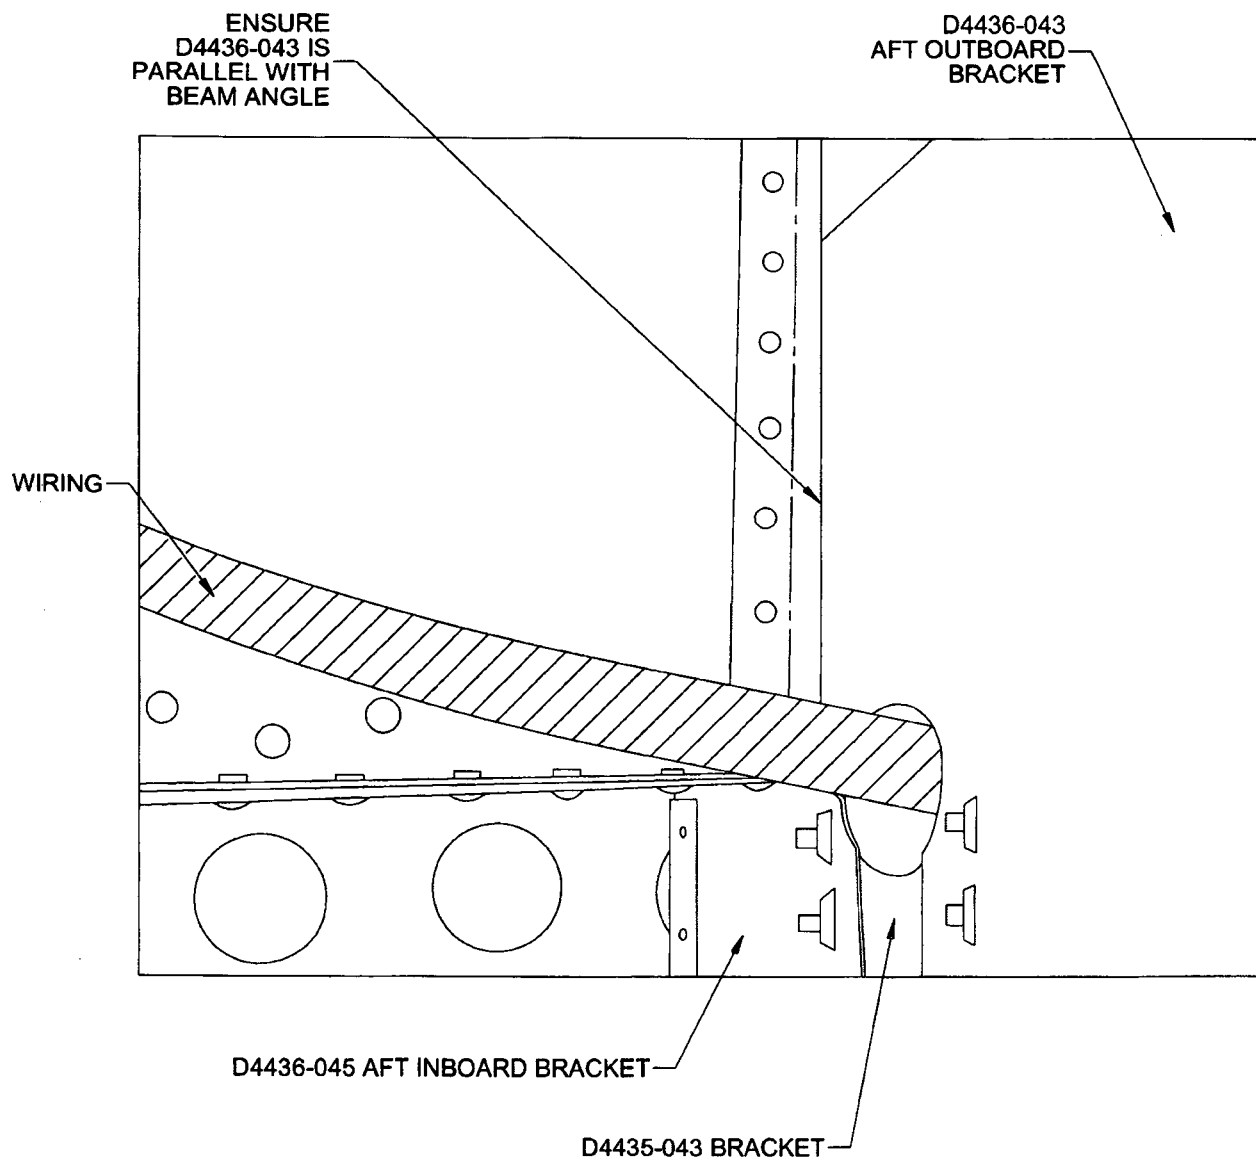


Figure 4. D4436-043 & D4435-043 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 7 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

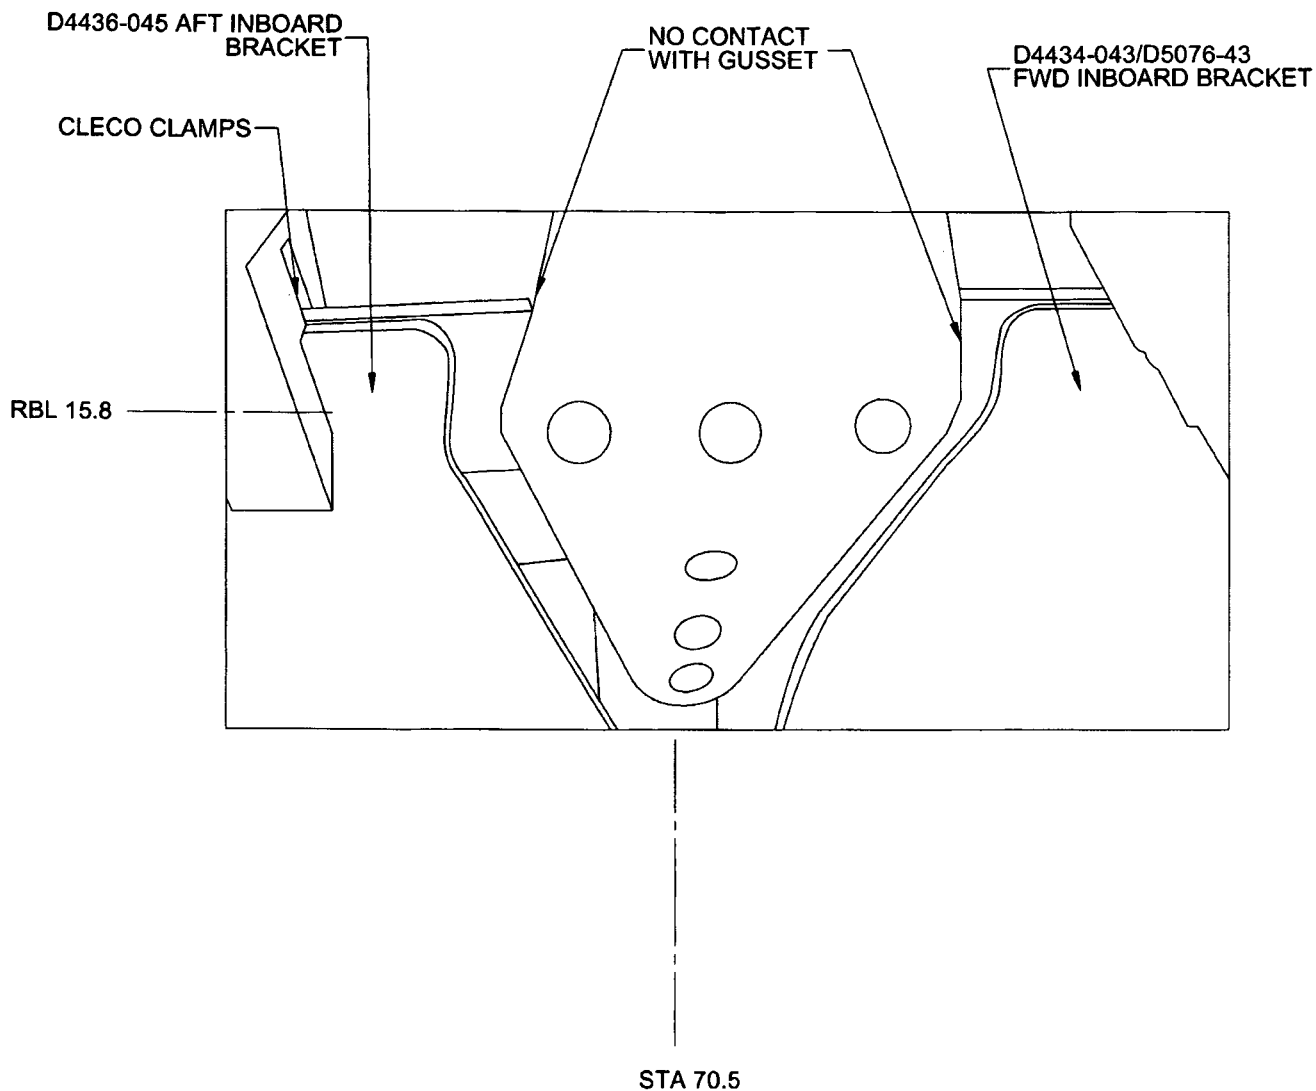


Figure 5. D4436-045 & D4434-043/D5076-043 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 8 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

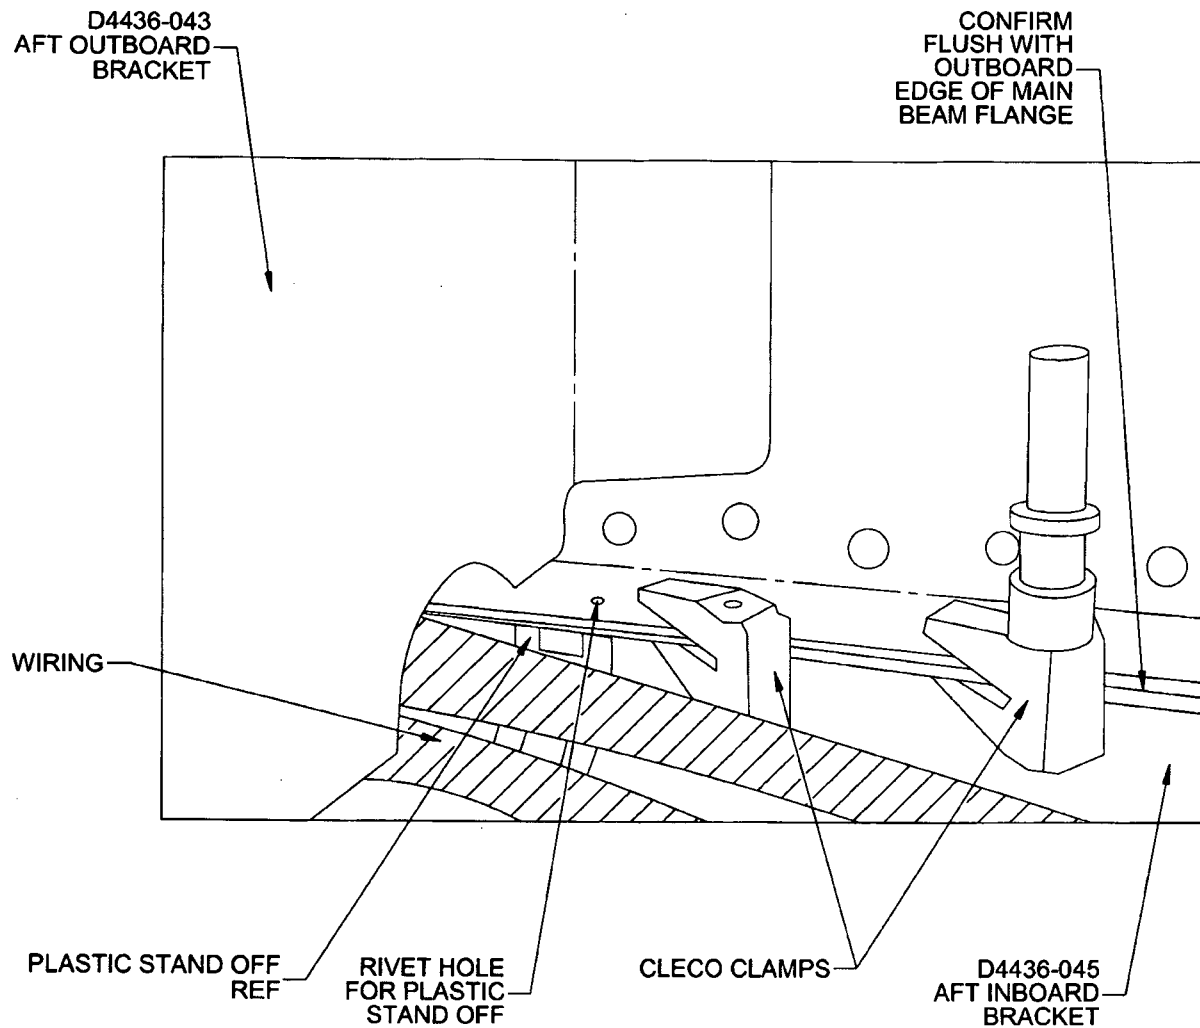


Figure 6. D4436-043 & D4436-045 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 9 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

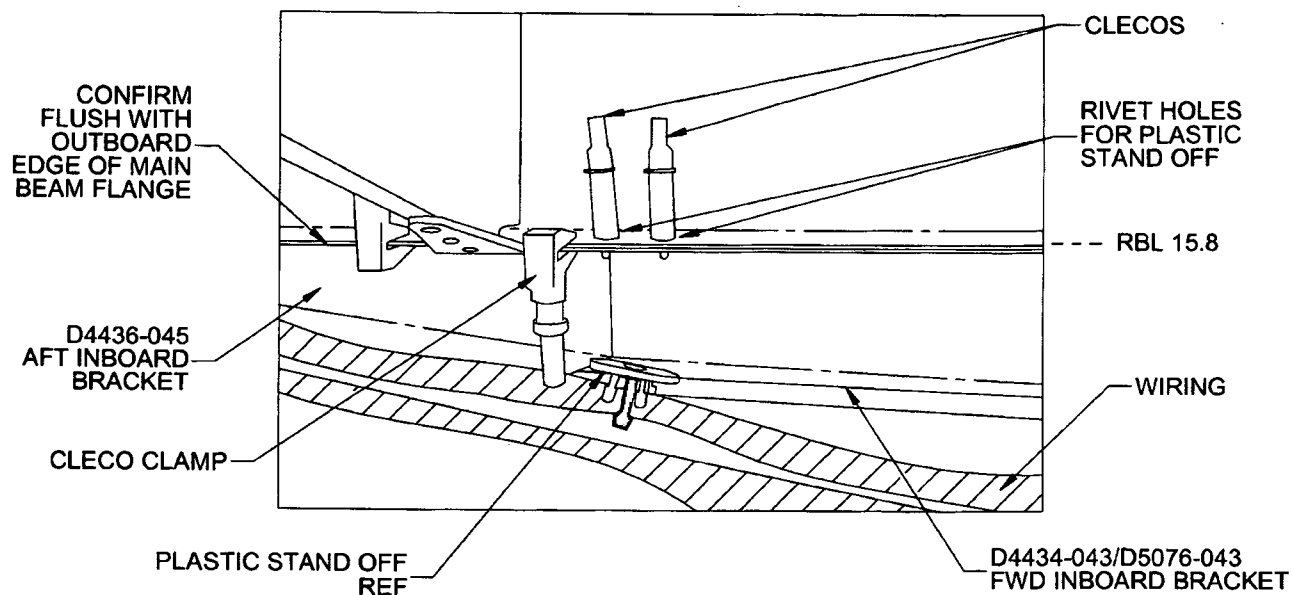


Figure 7. D4434-043/D5076-043 & D4436-045 Brackets Installation

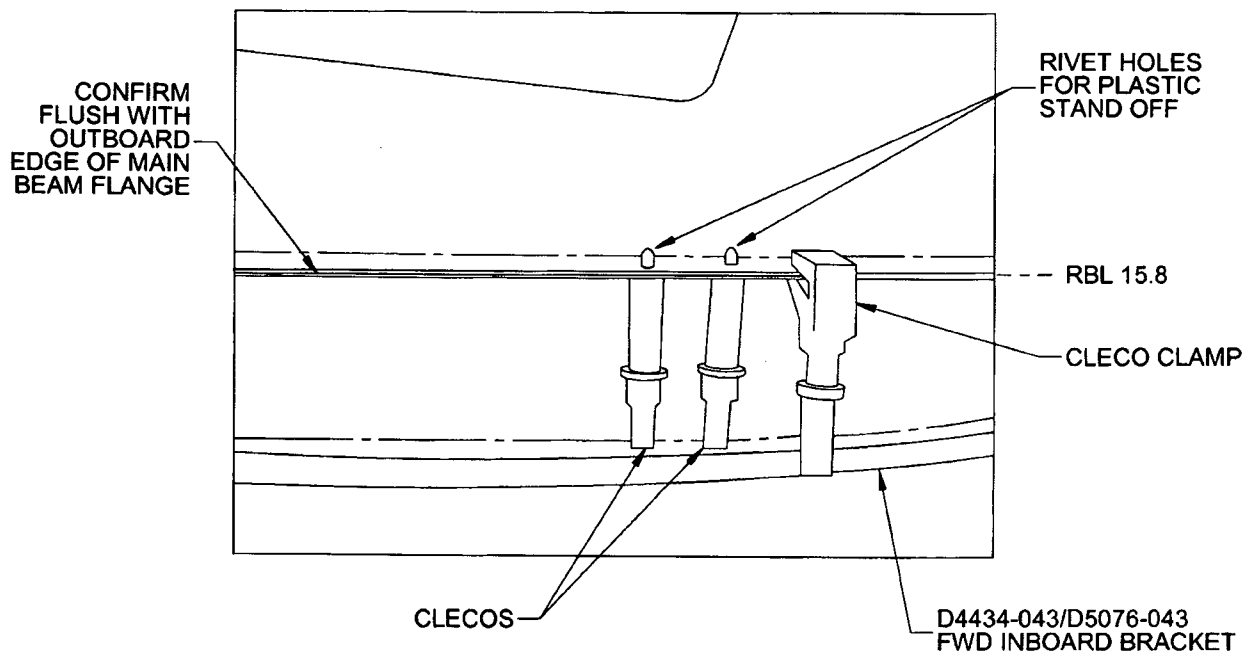


Figure 8. D4434-043/D5076-043 Fwd Inboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 10 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

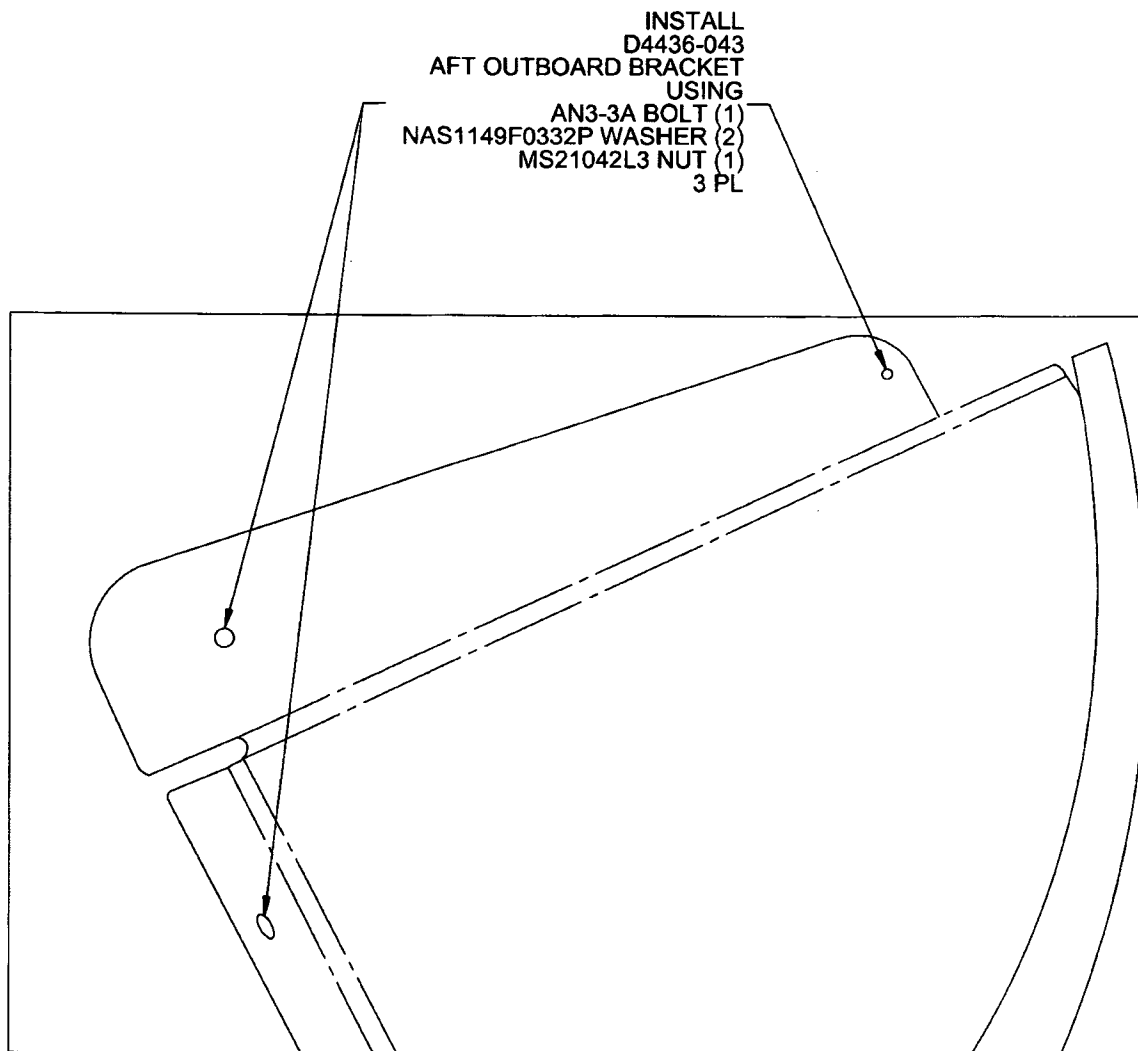


Figure 9. D4436-043 Aft Outboard Bracket Installation


CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	A.S	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 11 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

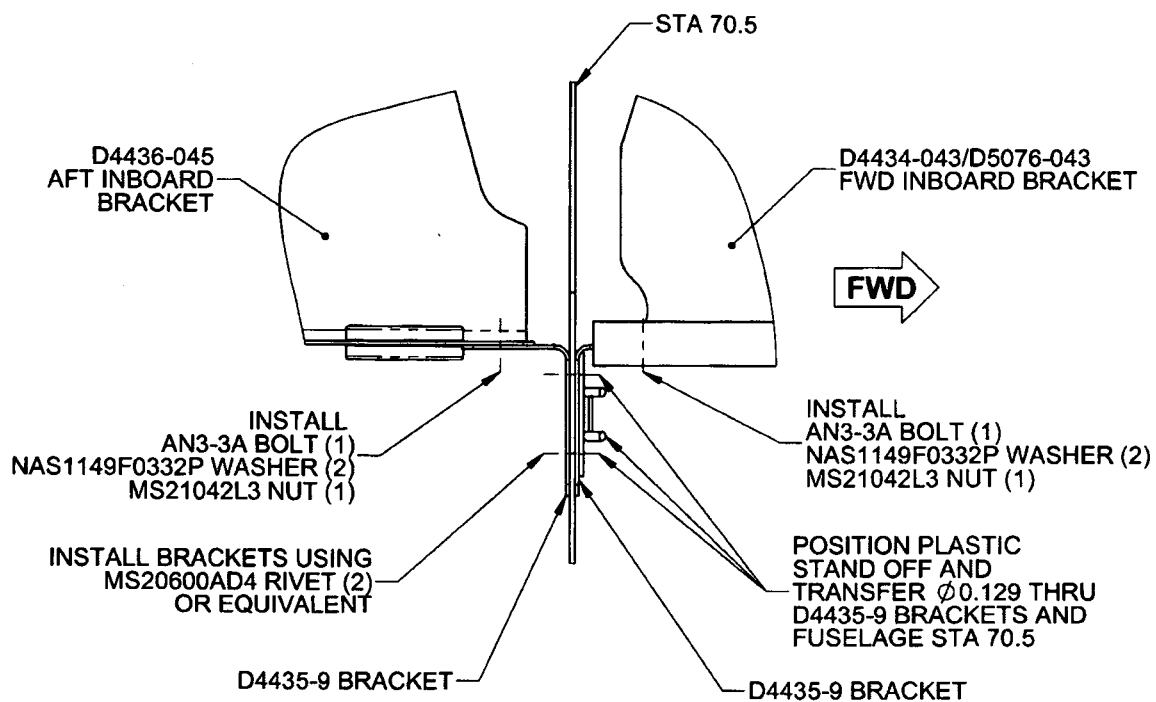

LOOKING UP AT STA 70.5

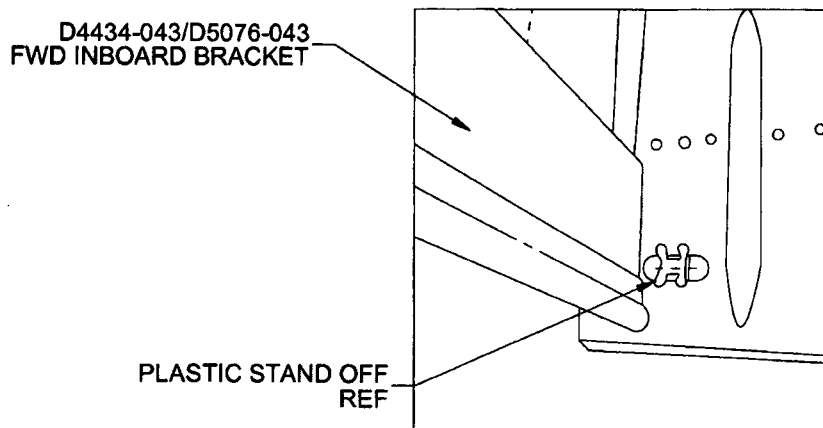


Figure 10. D4434-043/D5076-043 and D4435-9 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AUS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 12 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

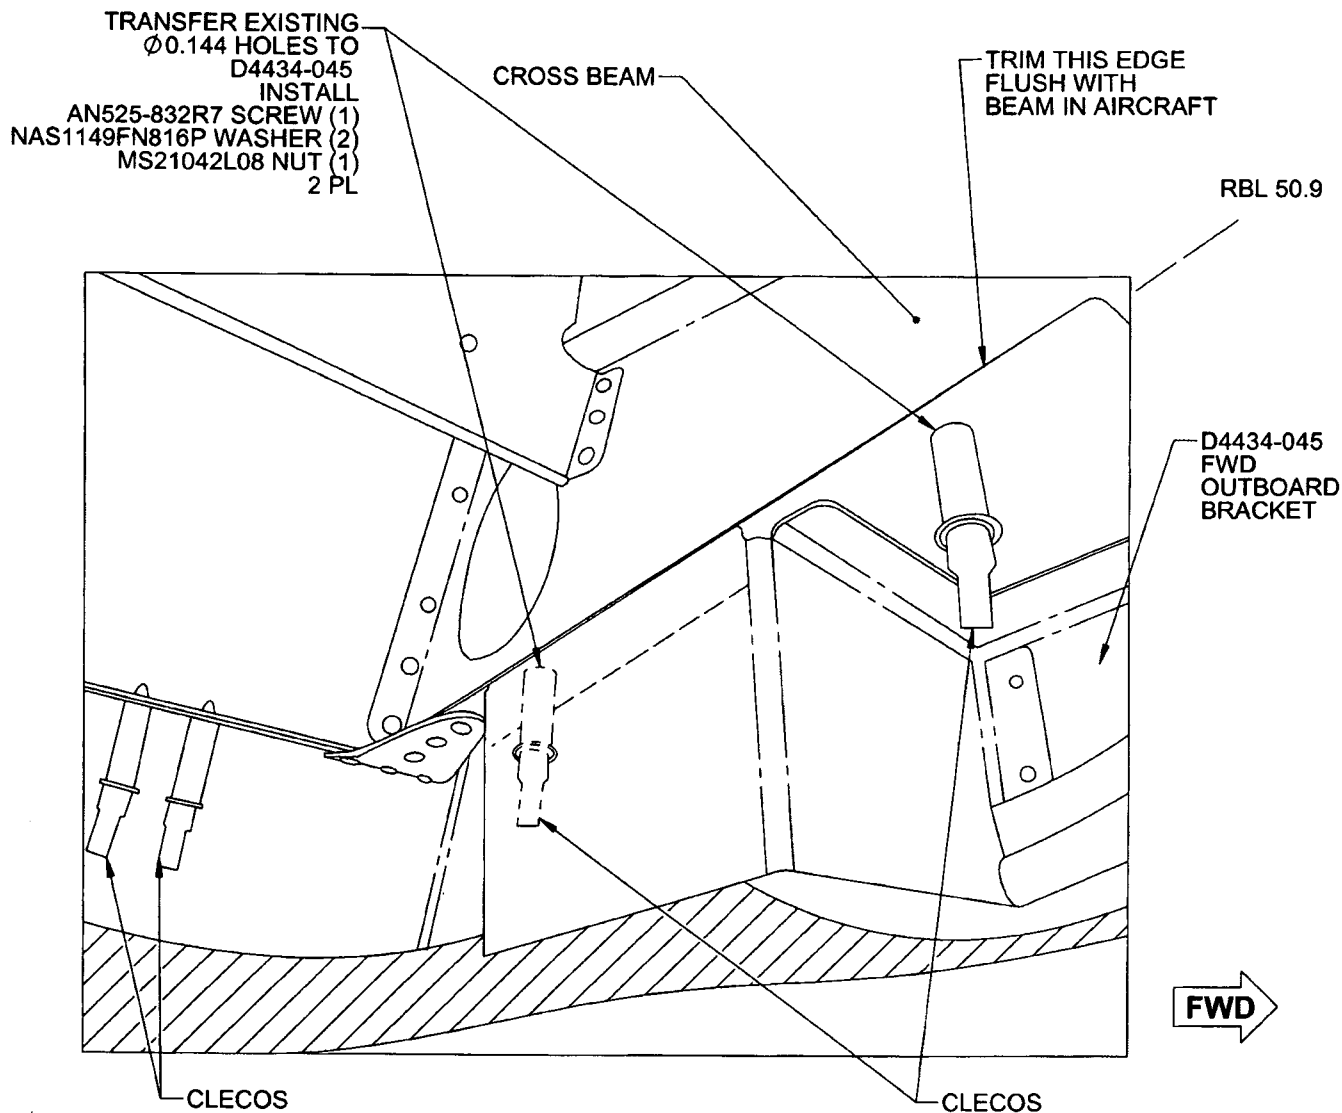


Figure 11. D4434-045 Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 13 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

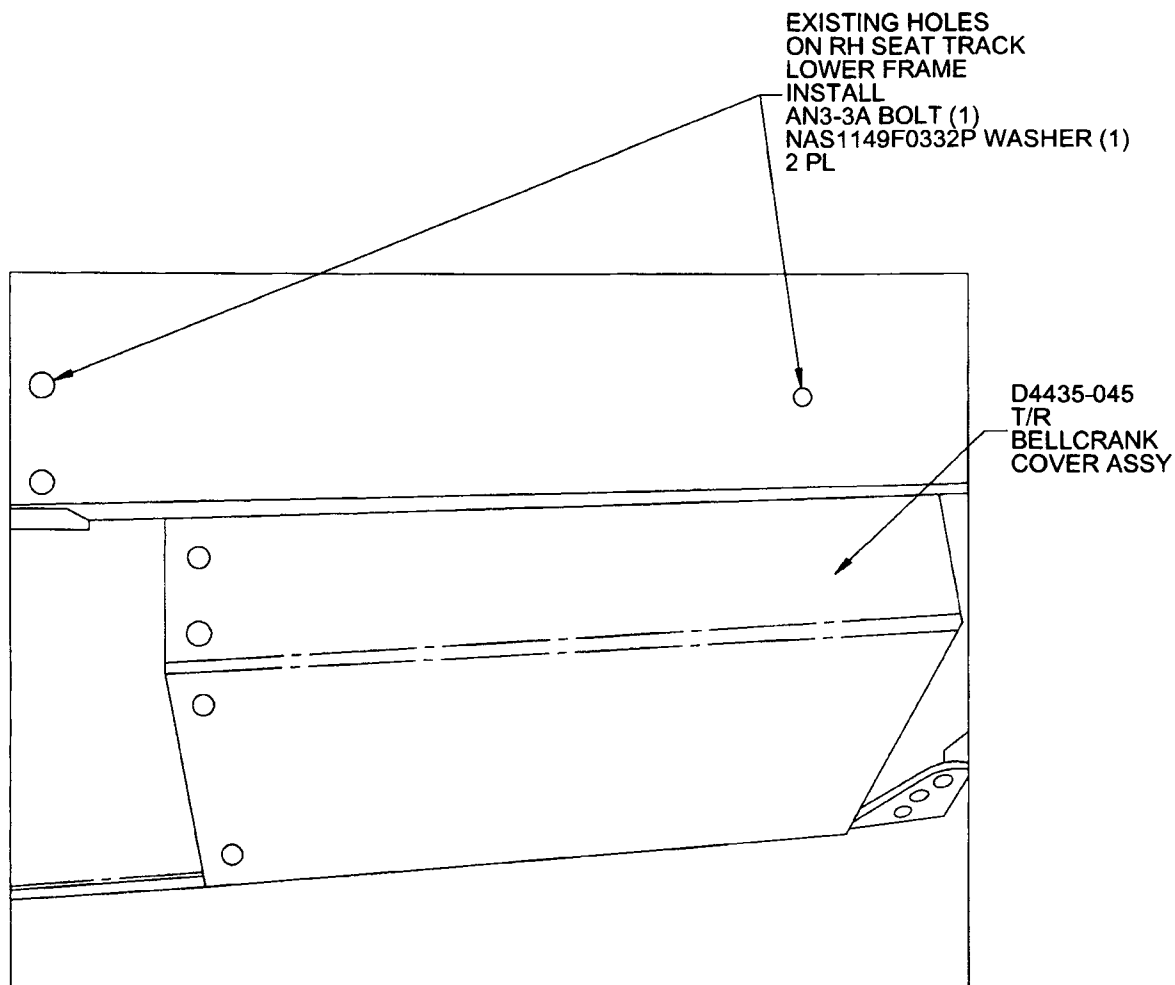



Figure 12a. D4435-045 T/R Bellcrank Cover Installation (-141)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED		DRAWING NO. DSI 9590	REV. F SHEET 14 OF 19
MFG. APPR.	N/A	TITLE FLOOR WINDOW CLOSE-OUT KIT NTS	
APPROVED			
DE APPR.		COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	
DATE	15.01.12		

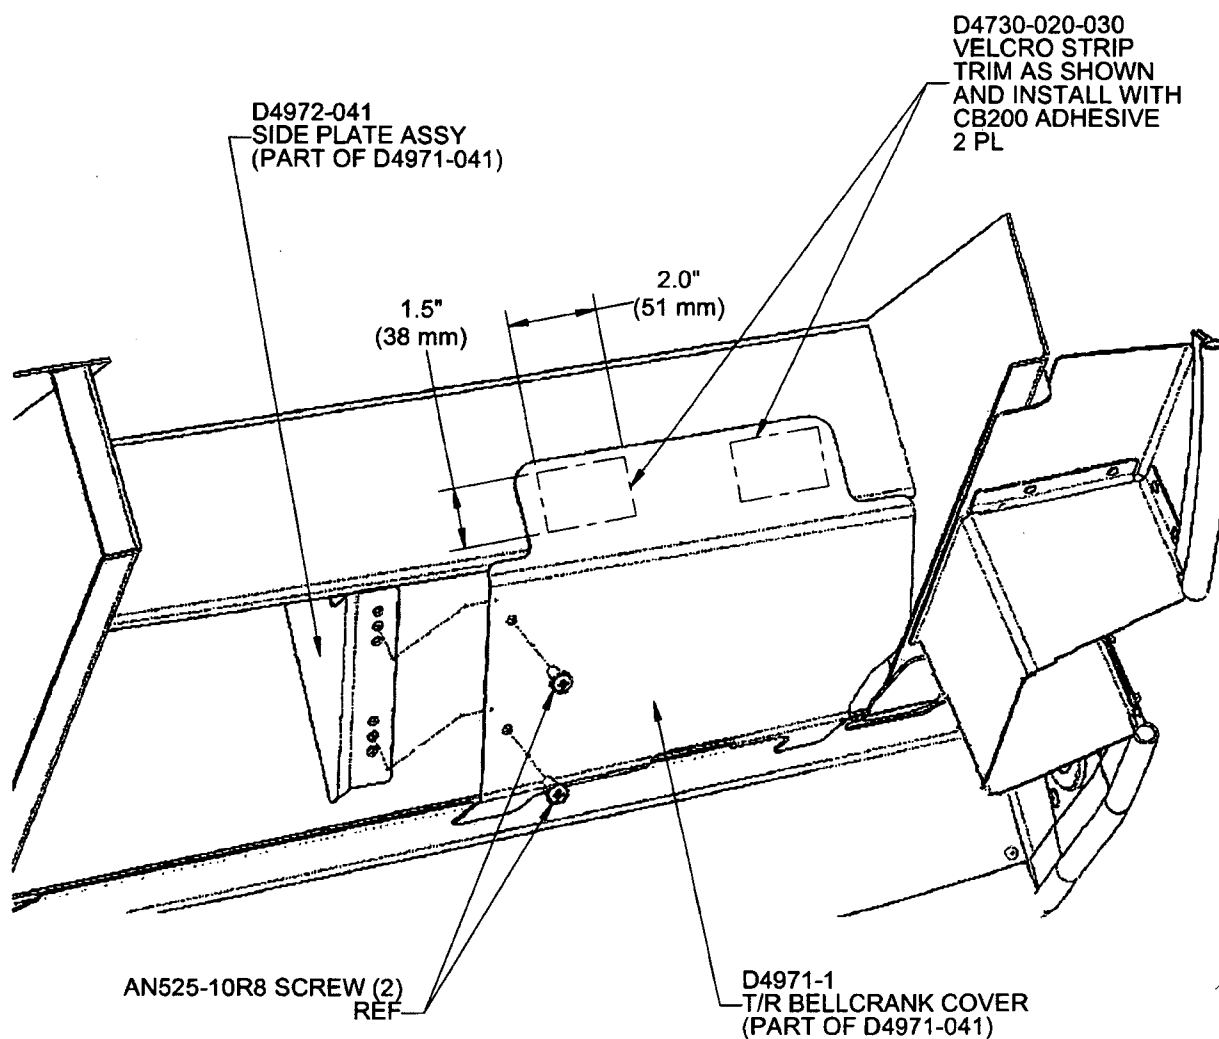


Figure 12b. D4971-041 T/R Bellcrank Cover Assy Installation (-143/-145)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	A/S		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 15 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

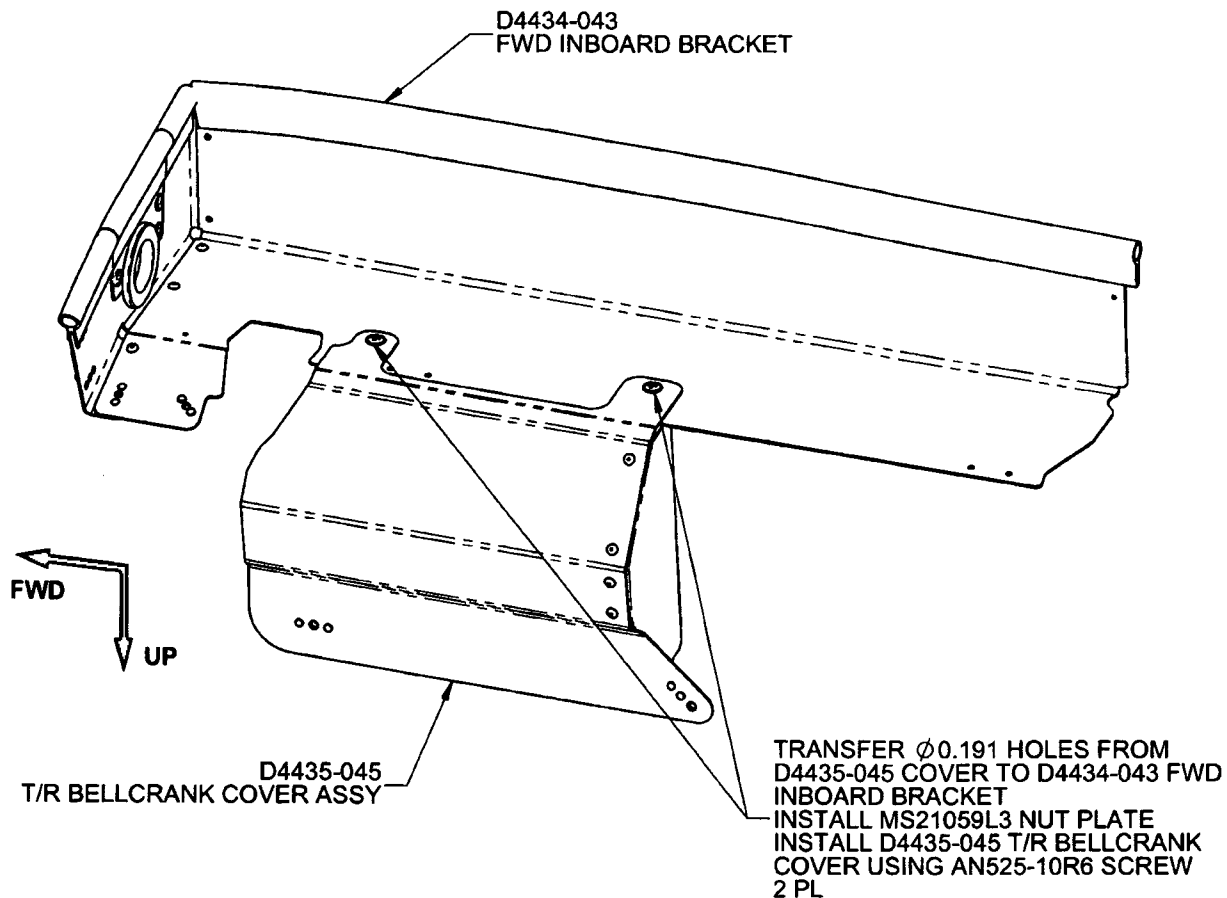


Figure 13a. D4435-045 Cover Installation (-141 ONLY)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *D. Shepherd*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	A/S		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 16 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

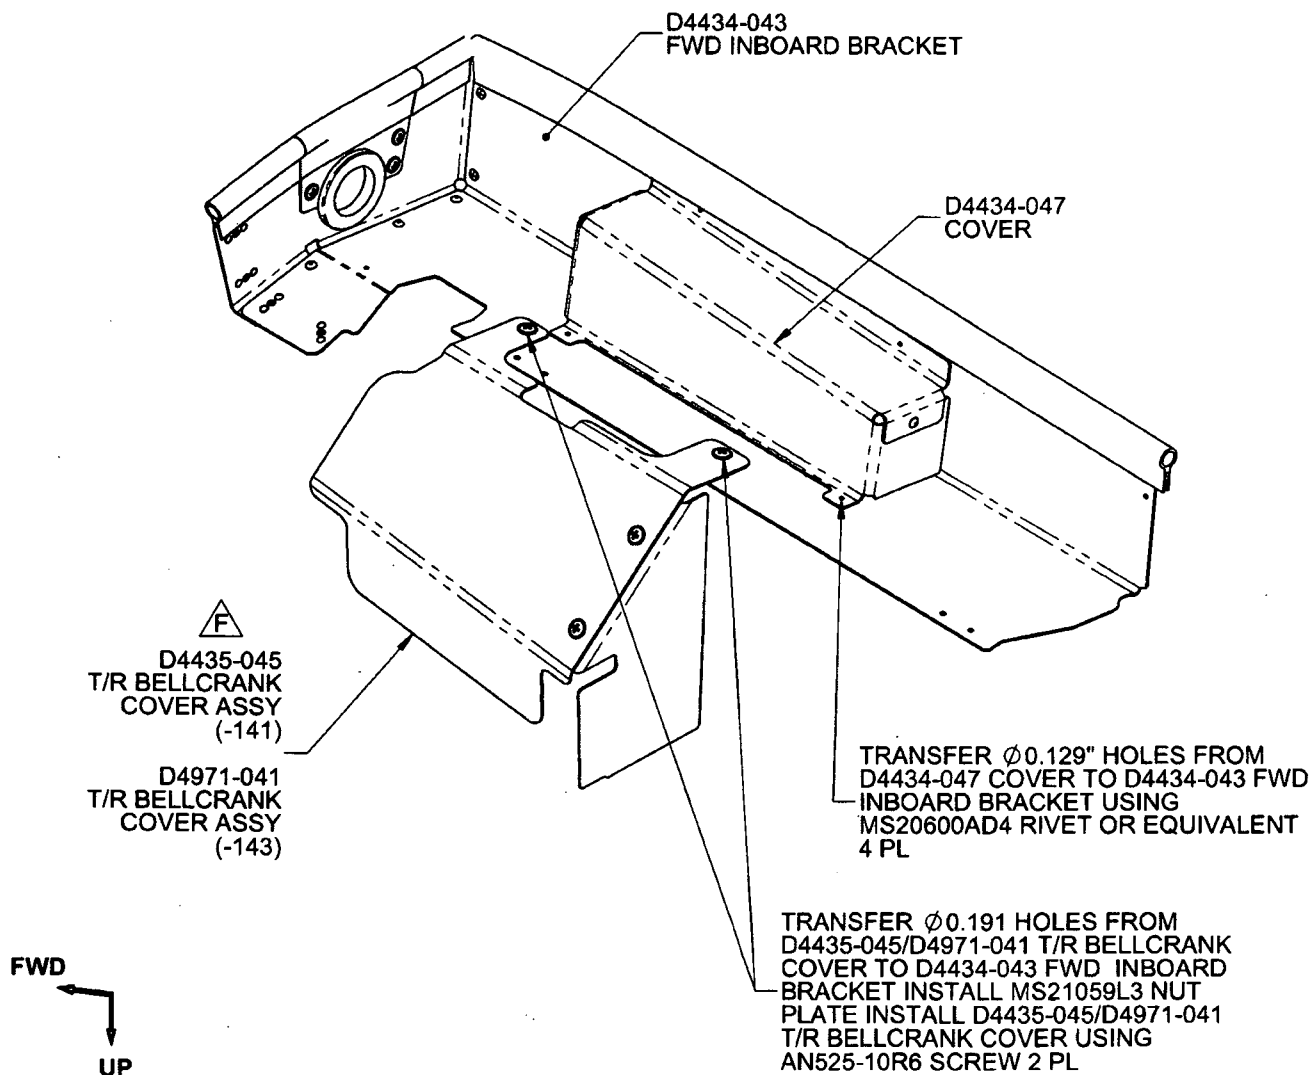


Figure 13b. D4971-041/D4435-045 & D4434-047 Cover Installation **F**
(D4434-047 is Optional on -141)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 17 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

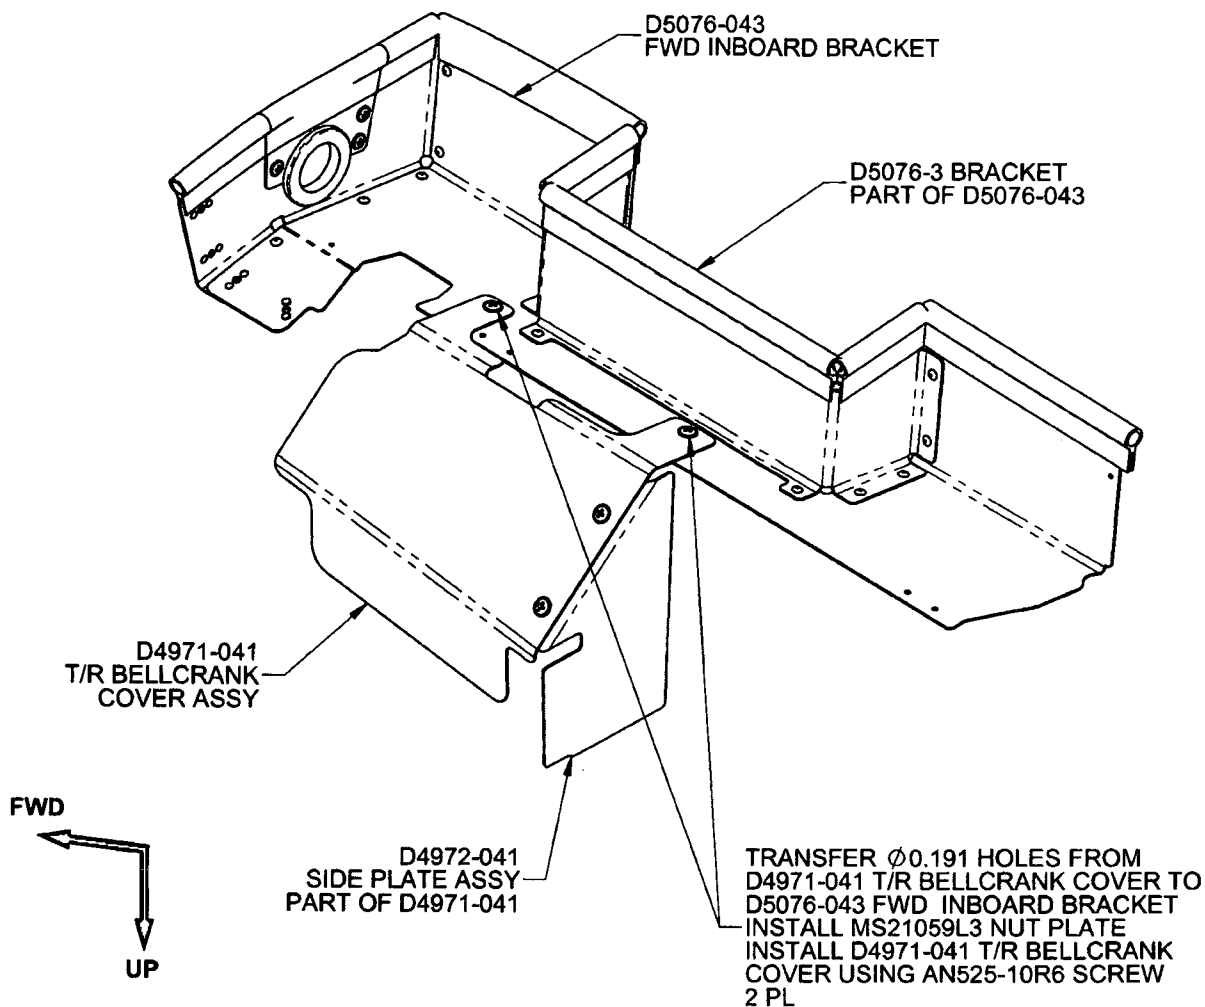


Figure 13c. D4971-041 INSTALLATION INTO D5076-043 (-145 ONLY)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 18 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

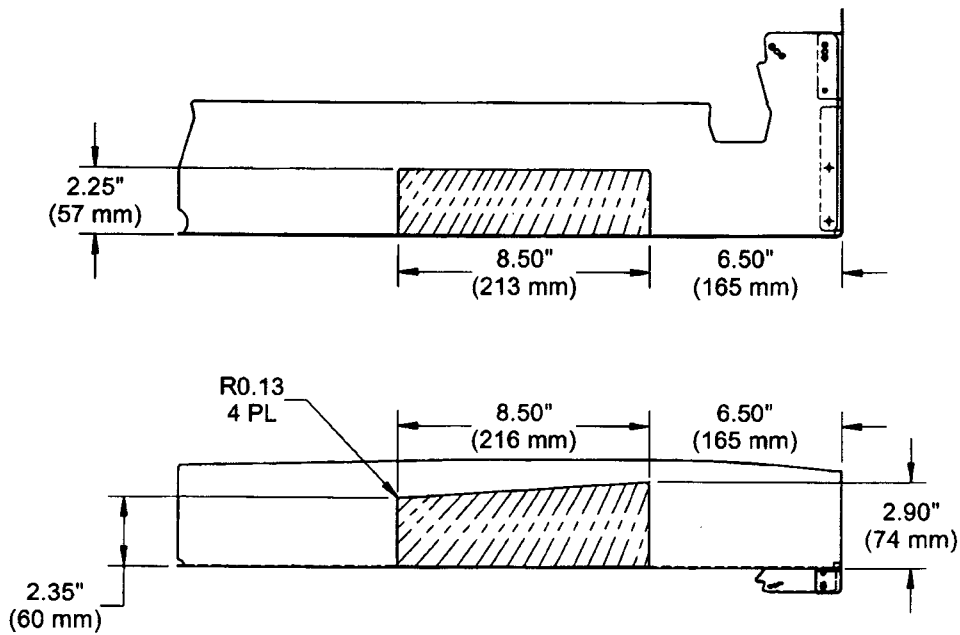
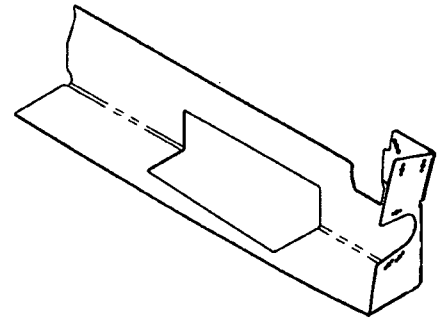


Figure 14. D4434-043 Fwd Inboard Bracket Cutout

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 19 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

REFERENCE ONLY

DAS
02
9-89

2.0 Parts List

Qty -141	Qty -143	Qty -145	Part Number	Description
X			D350-567-141	FLOOR WINDOW CLOSE-OUT KIT (REGULAR SEATS)
	X		D350-567-143	FLOOR WINDOW CLOSE-OUT KIT (ENERGY ATTENUATING SEATS)
		X	D350-567-145	FLOOR WINDOW CLOSE-OUT KIT (AS 350 B3e)
1	1	1	D3802-1-024	SEAL (24")
1	1		D4434-041	FWD BRACKET ASSEMBLY
1	1		D4434-047	COVER ASSEMBLY
1			D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	2	2	D4435-9	BRACKET
1	1	1	D4436-041	AFT BRACKET ASSEMBLY
1	1	1	D4441-1-240	RUBBER SEAL (24")
		1	D4730-020-030	VELCRO STRIP
	1	1	D4971-041	T/R BELLCRANK COVER ASSEMBLY
		1	D5076-041	FWD BRACKET ASSEMBLY
7	5	5	AN3-3A	BOLT
2	2	2	AN525-10R6	SCREW
2	2	2	AN525-832R7	SCREW
		1	CB 200	3.5g ACRYLIC ADHESIVE
7	7	7	MS21042L06	NUT (OR MS21042-06)
2	2	2	MS21042L08	NUT (OR MS21042-08)
5	5	5	MS21042L3	NUT (OR MS21042-3)
2	2	2	MS21059L3	NUTPLATE
7	7	7	MS35206-229	SCREW
12	10	10	NAS1149F0332P	WASHER (AN960-10L)
14	14	14	NAS1149FN616P	WASHER (OR AN960-6L)
2	2	2	NAS1149FN816P	WASHER (OR AN960-8L)

3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141/-143/-145 Kits.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D350-567-141/-143/-145	3.9 lb	17.9 in	69.8 in-lb	65.5 in	255.5 in-lb
Floor Window Close-out Kit	1.77 kg	0.45 m	0.80 m-kg	1.66 m	2.94 m-kg

4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141/-143/-145 Close-out Kits. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
 D350-567-115 - OK to remove D3295-041
 D350-567-031 - OK to remove D3212-1
 D350-567-011 - OK to remove D2214
 D350-567-021 - OK to remove D2951
- It is acceptable to drill/trim the D350-567-141/-143/-145 Close-out Kits as required to improve fit.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

Change Record

PAGE 1 OF 1

Part Number: D350-567-141Description: FLOOR WINDOW CLOSEOUT[illegible]